


PROPER OPERATION OF THE FIRE HOSE REEL




1 Break glass to actuate the fire alarm and start the fire pump

2 Open the control valve

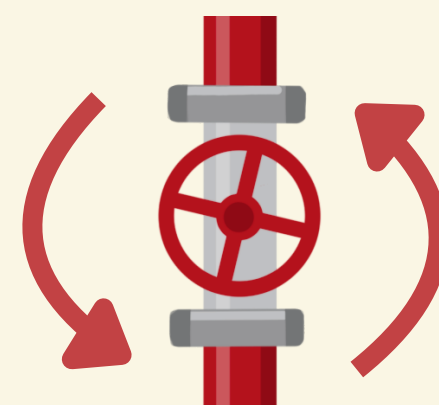

3 Break glass of the nozzle enclosure and pull out the nozzle

4 Turn on the nozzle and direct the jet at the base of the fire

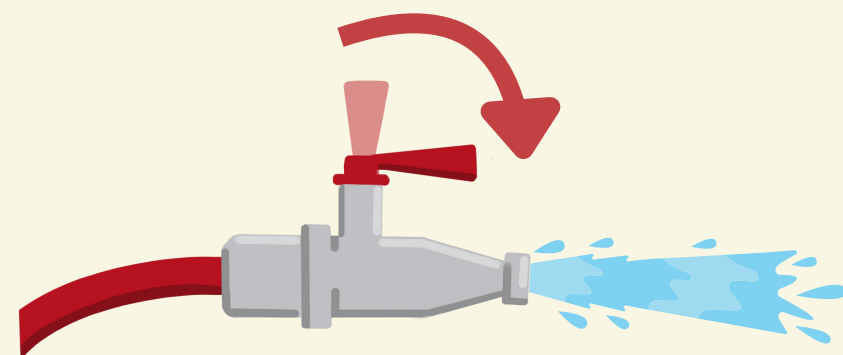

NOT suitable for electrical fires

